

CLEANING OR REPLACING INSTRUCTIONS



Filter Replacement Kit HRV/ERV

- PH7.15 / PH7.15ES / PE7.15 / XPH1.5 / XDH7.15 / RNC1.5 / DH7.15 / SH0.8 / SHM0.8 / AIREMAID1500
- PH10.22 / PH10.20ES / XPH2.0 / RNC2.0 / RNC2.0ES / SH0.12 / SHM0.12 / DH10.22
- C3.14HRV / RNC1.0 / RNC12
- SS3.80HRV / SS3.80ERV
- SS3.12FSD / SS3.12DD / AIREMAID1200

READ AND SAVE THESE INSTRUCTIONS

Read all instructions and WARNINGS carefully before beginning.

⚠ WARNING: Risk of electrical shocks. Before servicing or cleaning the HRV/ERV system, always disconnect the unit from its power source.

- Four times a year or as needed, vacuum the filters.
- Replace the filters once a year.

STEP 1

Disconnect the power supply.

STEP 2


Unlatch the door panel.

STEP 3

Remove door panel by sliding it off the hinges.

STEP 4

Remove the filters and vacuum.
(Skip this step if you are replacing the filters.)

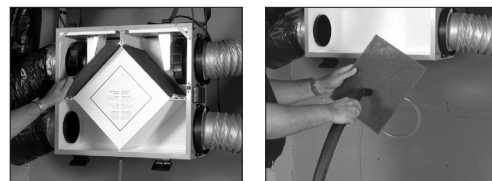

STEP 5

HRV MODEL: Once a year or as needed, slide out the heat recovery core. Vacuum the four surfaces, let soak in warm water for 15 minutes, then spray rinse and let dry.

ERV MODEL: Once a year or as needed, slide out the heat recovery core. Vacuum the four surfaces, let soak in warm water for 15 minutes, then spray rinse and let dry.



STEP 6

Once a year or as needed, clean the interior of the unit (walls and drain pan) with a mild non-abrasive soap. It is recommended to use products that are environmentally friendly.



STEP 7:

Replace Core.

STEP 8:

Replace and dispose of the old filters in accordance to your municipal guidelines.

STEP 9:

Reinstall and latch door panel.

STEP 10:

Connect the power supply.



Greentek
50 Kanalfakt Way,
Bouctouche, NB Canada E4S 3M5

Toll free: 1 888 724-5211
Fax: 1 (866) 426-7430

Visit us at: www.greentek.ca

Maintenance pour filtre de VRC/VRE

PH7.15 / PH7.15ES / PE7.15 / XPH1.5 / XDH7.15 / RNC1.5 / DH7.15 / SH0.8 / SHM0.8 / AIREMAID1500

PH10.22 / PH10.20ES / XPH2.0 / RNC2.0 / RNC2.0ES / SH0.12 / SHM0.12 / DH10.22

C3.14HRV / RNC1.0 / RNC12

SS3.80HRV / SS3.80ERV

SS3.12FSD / SS3.12DD / AIREMAID1200

LIRE ET GARDEZ

Lire toutes instruction avant de continuer.

⚠ MISE EN GARDE : Risque de chocs électriques. Avant l'entretien ou le nettoyage de votre système de VRC/VRE, toujours débrancher votre unité de la prise de courant mural.

- Veuillez nettoyer vos filtres quatre fois par années ou au besoin, à l'aide d'un aspirateur.
- Changer les filtres une fois par année.

ÉTAPE 1

Débrancher l'appareil.

ÉTAPE 2



Détacher la porte d'accès.

ÉTAPE 3

Enlever la porte d'accès en la glissant vers la droite.

ÉTAPE 4


Enlever les filtres et nettoyer à l'aide d'un aspirateur .
(Négliger cette étapes si vous remplacez les filtres

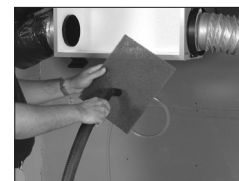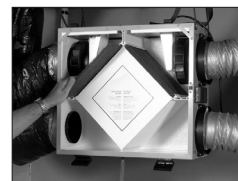

ÉTAPE 5

MODÈLE VRC : Une fois par an ou au besoin, nettoyer les quatre surfaces à l'aide d'un aspirateur laisser tremper pendant 15 minutes dans de l'eau savonneuse, rincez et laissez sécher.

MODÈLE VRE : Une fois par an ou au besoin, nettoyer les quatre surfaces à l'aide d'un aspirateur laisser tremper pendant 15 minutes dans de l'eau savonneuse, rincez et laissez sécher.

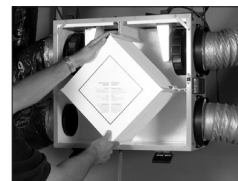

ÉTAPE 6

Une fois par année ou au besoin, nettoyez l'intérieur de l'appareil (parois et bac à eau) avec un détergent doux et on abrasif. Il est recommandé d'utiliser des produits nous nuisibles à l'environnement.



ÉTAPE 7

Remplacer le noyau.

ÉTAPE 8

Remplacer et disposer vos vieux filtre en respectant les normes municipales.

ÉTAPE 9

Réinstaller la porte d'accès.

ÉTAPE 10

Rebrancher l'appareil.



Greentek
50 Kanalfakt Way,
Bouctouche, NB Canada E4S 3M5

Sans frais: 1 888 724-5211
Télécopieur: 1 (866) 426-7430

Visitez-nous au : www.greentek.ca